

# SmartKits SKs

## INSTRUCTION F1 STEERING KIT WITH PADDLE FOR SMART 451



CABLE PADDLE



PADDLES



NEW REAR COVER

### Note.

The machine is in off.

### Remove the steering wheel

1. With a Torx 40 unscrew the screw under the steering wheel.
2. Remove the steering wheel and unhook the two connectors.


### Get off the steering wheel




Unscrew the two screws (Torx 25)  
for get off the rear Cover




Unscrew the two screws (Torx 25)  
for get off the front cover

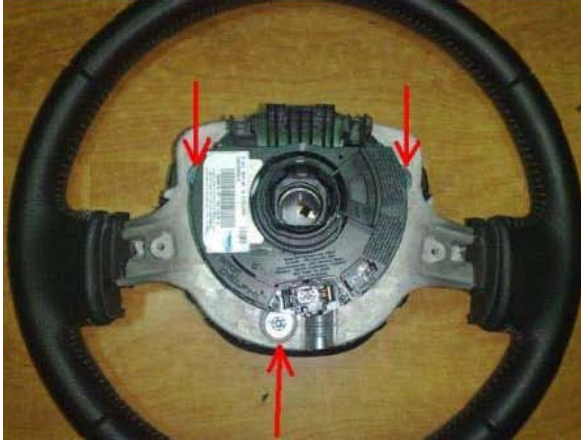


Unscrew the three screws (Torx 40) for get off the air-bag

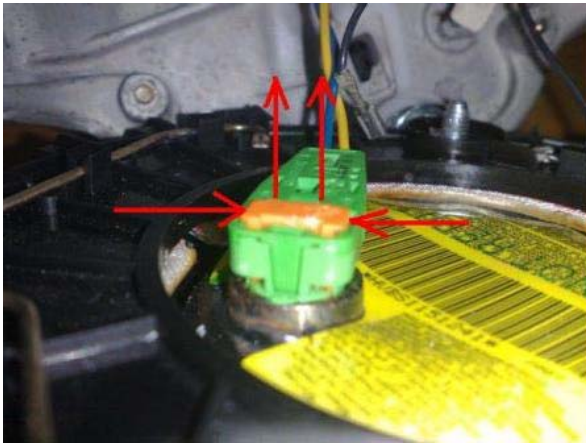

Use a small screwdriver to put off the safety connector of the air-bag orange color.

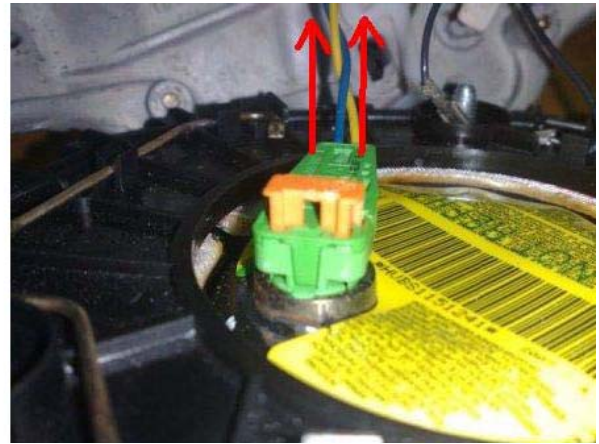

Remove the connector of the air-bag, green color.

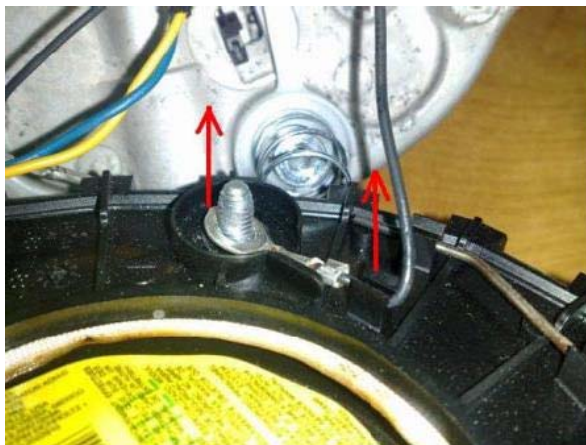


Remove the connector of the horn



In the rear of the steering wheel to remove the connector of the earth.



Remove the sensor of steering wheel.

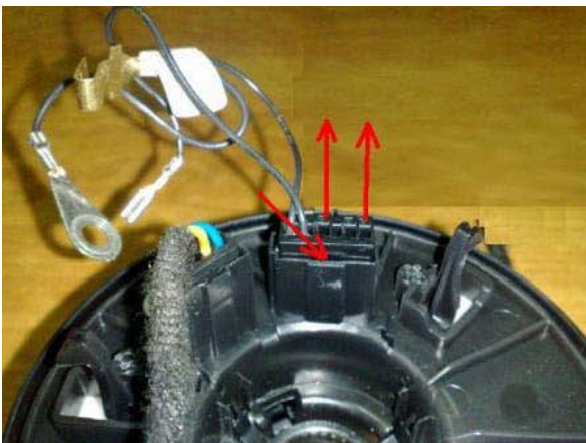

Remove the connector of the cable



Get in the new cable.



Get on the sensor of steering wheel



Clasp the cable of the paddles



Get in the connector of the earth.



Fit the connector of the horn.



Get on the connector of horn






Get on the connector of the air-bag, green color



Put in the safety connector of the air-bag, orange color.

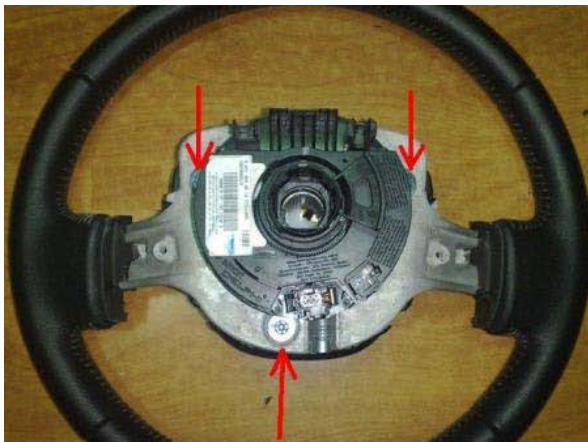

Tighten the three screws of the air-bag.



Tighten the three screws of the front cover.



Place the rear cover on the steering wheel



Place the cable of the paddle out the rear cover.



Get in the Paddles of the cable.



Tighten the two screws of the Paddles.



Get on the steering wheel and check that work Paddles and horn